



HTC Gateway

Quick Start Guide

A-HRIO

REQUIRED SOFTWARE

The HTC Gateway requires Aparian Slate software to setup and configure. The software installation can be found at www.aparian.com/software/slate.

MODULE INSTALLATION

The HTC Gateway requires input power of **18-28Vdc**. The wiring of the power connector can be found in the wiring diagram below. The HTC Gateway communicates on both Ethernet and Hitachi RIOH and ROW. The wiring of the Hitachi connector can be found in the wiring diagram below. The Ethernet connector should be wired according to industry standards which can be found in the additional information section.



NETWORK SETUP

The HTC Gateway will have DHCP enabled as factory default. This the user must use a DHCP server to assign an Ethernet network address to the module. Refer to the additional information section for DHCP servers. Once the module has been assigned an Ethernet address the user can configure the module with Aparian Slate.

ADDITIONAL INFORMATION

The following resources contain additional information that can assist the user with the module installation and operation.

| Resource | Link |
|---|--|
| Slate Installation | www.aparian.com/software/slate |
| HTC Gateway User Manual HTC Gateway Datasheet Example Code & UDTs | http://www.aparian.com/products/htcgateway |
| Ethernet wiring standard | www.cisco.com/c/en/us/td/docs/video/cds/cde/cde205_220_420/installation/guide/cde205_220_420_hig/Connectors.html |

SUPPORT

Technical support will be provided via the Web (in the form of user manuals, FAQ, datasheets etc.) to assist with installation, operation, and diagnostics.

For additional support the user can use either of the following:

| | |
|---------------------|--|
| Contact Us web link | www.aparian.com/contact-us |
| Support email | support@aparian.com |

